

4

3

2

1


REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A	INITIAL RELEASE	1/10/2018	

2 CENTER SCREW LOCATIONS ARE AVAILABLE TO USE BASED ON YOUR FENDER SHAPE.

CHOOSE THE BEST POSITION. IF NEEDED, THE FLANGES CAN BE BENT BY HAND TO FIT.

LICENCE PLATE BRACKET MAY BE INSTALLED UPSIDE DOWN TO AVOID THE LIGHT SHINING HORIZONTALLY.

CHECK YOUR FENDER'S SHAPE TO DETERMINE THE CORRECT ORIENTATION AND POSITION.

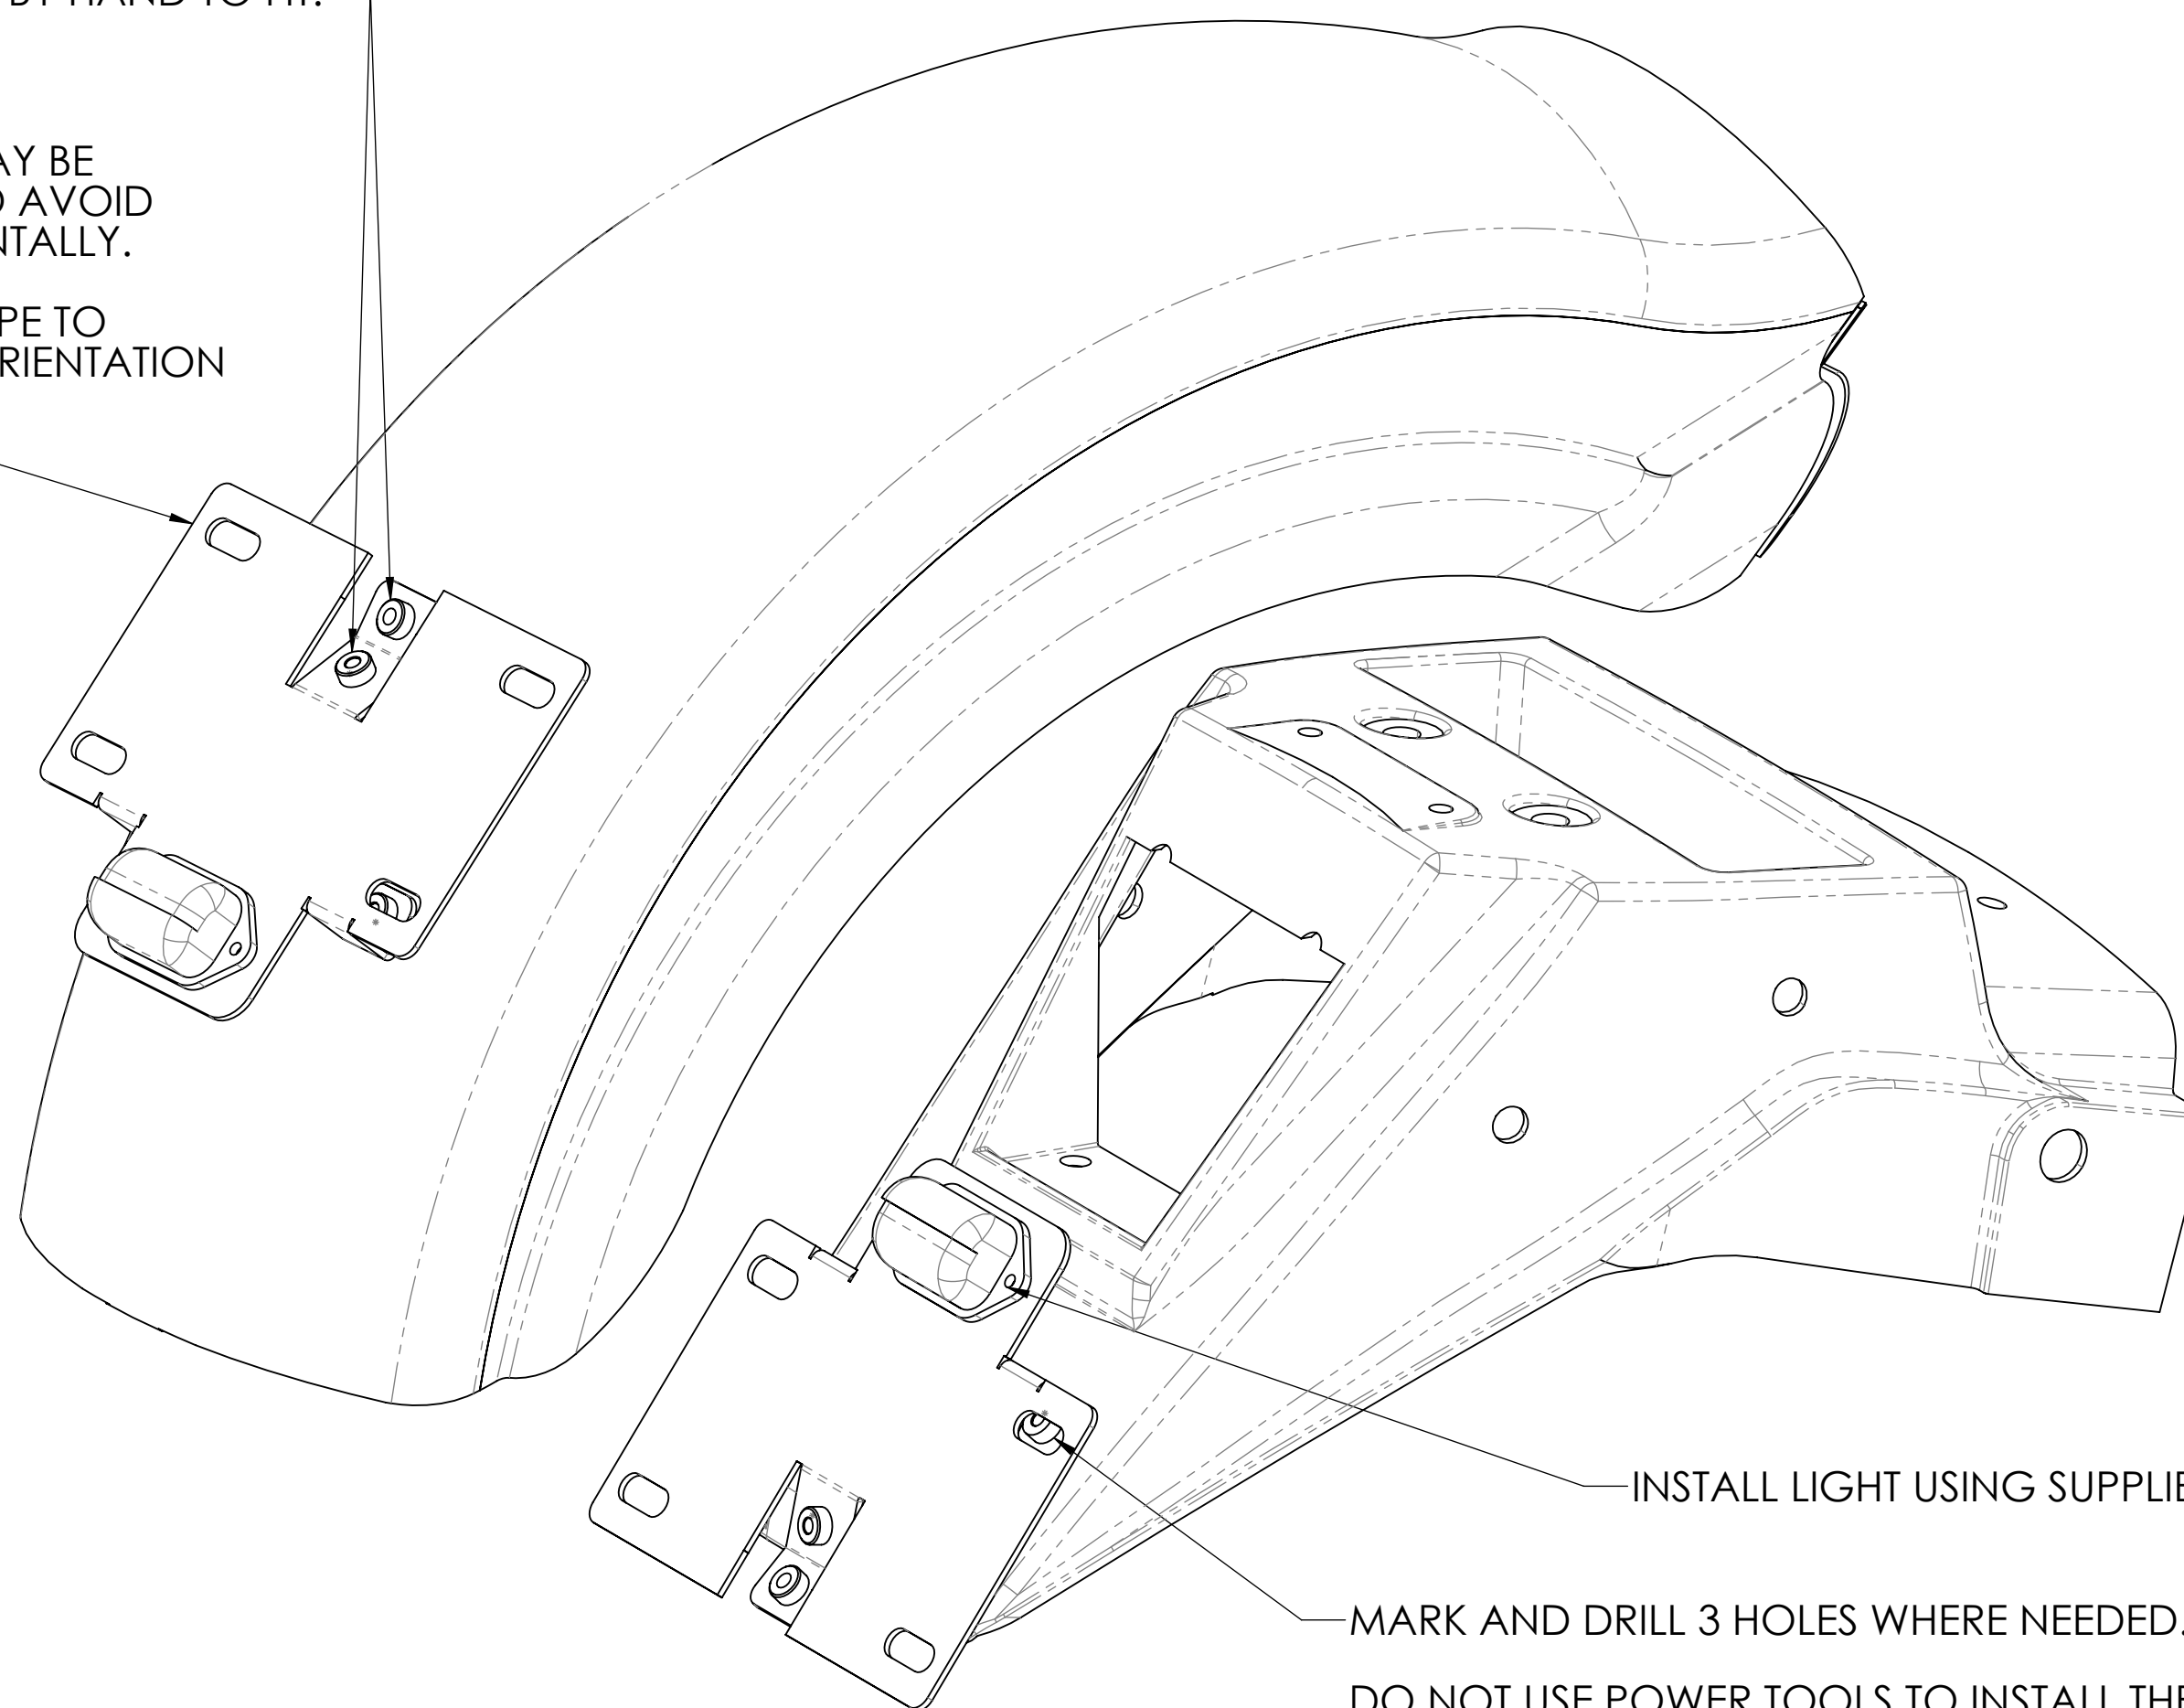

INSTALL LIGHT USING SUPPLIED M3 SCREWS AND NUTS

MARK AND DRILL 3 HOLES WHERE NEEDED.

DO NOT USE POWER TOOLS TO INSTALL THE SCREWS. THE CLINCH NUTS MAY BREAK FREE IF OVER-TORQUED.

USE LOW STRENGTH THREADLOCKER ON ALL SCREWS.

INSTALLATION STEPS

1. INSTALL LIGHT USING SUPPLIED M3 SCREWS AND NUTS. APPLY THREADLOCKER.
2. HOLD YOUR BRACKET AGAINST THE FENDER AND MARK THE HOLE LOCATIONS.
3. DRILL THE HOLES. START SMALL (1/4") AND ENLARGE IF NEEDED.
4. LOOSELY ASSEMBLE THE 3 SCREWS FROM THE INSIDE OF THE FENDER. APPLY THREADLOCKER.
5. DO NOT USE POWER TOOLS TO AVOID RISK OF STRIPPING THE CLINCH NUTS.
6. ONCE YOU ARE HAPPY WITH THE FINAL POSITION, TIGHTEN THE 3 SCREWS.

HEMISPHERE
OFFROAD

LICENSE PLATE RELOCATION KIT INSTALLATION INSTRUCTIONS

4

3

2

1